



NOTE: This assemby step is for generic brand pulleys only. If you are using genuine Gates brand pulleys, skip this page and see the next page.

В

Note the plate orientation!



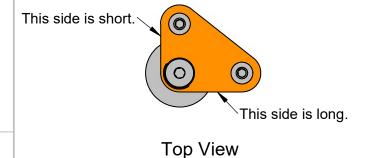

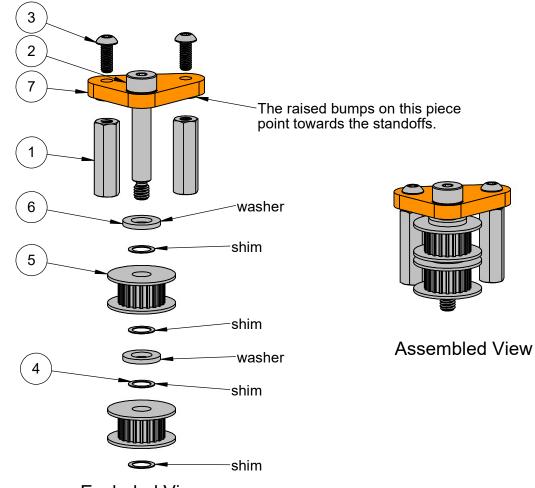

Exploded View

Left Corner Generic Pu	lley Assembly

В

	Created by:	last edited:
CC BY	Joshua Vasquez	3/14/2021
	SCALE: 1:1	SHEET 2 OF 7

A

7

2

Left Corner Pulley Reinforcement Plate


•


NOTE: This assemby step is for Gates brand pulleys only. If you are using generic brand pulleys, skip this page and see the previous page.

В

Note the plate orientation!

This side is short. This side is long. Top View

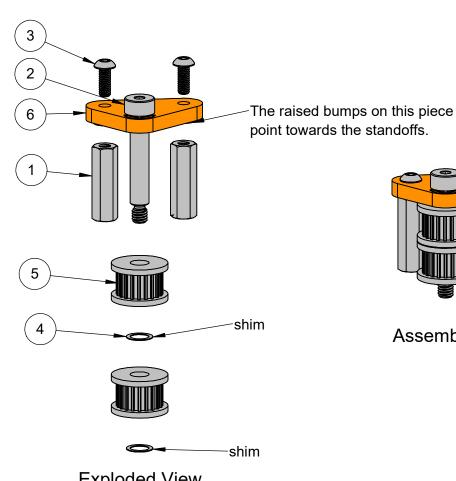

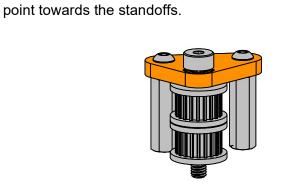


В


Assembled View

Exploded View

ITEM NO.	DESCRIPTION	QTY.
1	M3 Standoff, 20mm long, 6mm wide	2
2	M4 Shoulder Screw, 25mm long	1
3	M3 Buttonhead Screw, 8mm long	2
4	M5 Shim, 0.2mm thick, 7mm OD	2
5	20T Idler pulley, 2GT, 5mm bore	2
6	Left Corner Pulley Reinforcement Plate	1

Left Corner Gates Pulley Assembly			
	\odot	Created by:	last edited:
(CC)	BY	Joshua Vasquez	3/14/2021
		SCALE: 1:1	SHEET 3 OF 7

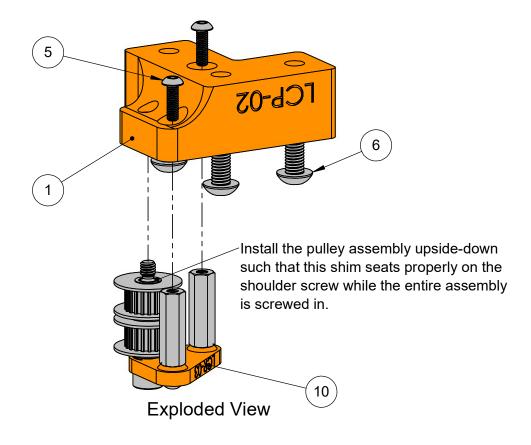

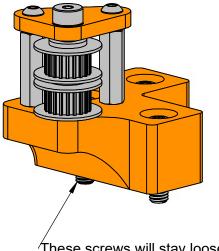

В

These screws will stay loose until this assembly is installed ont he frame.

Assembled View

Z	7
Γ	7

ITEM NO.	DESCRIPTION	
1	Left Corner Plate with Insert Installed	1
5	M3 Buttonhead Screw, 10mm long	2
6	M5 Buttonhead Screw, 20mm long	3
10	Left Corner Pulley Reinforcement Plate	1

Left Corn	er Pulley Plate	Assembly
(i)	Created by:	last edited:

Joshua Vasquez 3/14/2021 SCALE: 1:1 SHEET 4 OF 7

NOTE: This assemby step is for **generic** brand pulleys only. If you are using genuine **Gates** brand pulleys, skip this page and see the next page.


Top View

В

This side is short.

This side is long.

Note the plate orientation! Also note that this orientation is different from the prior pulley assembly.

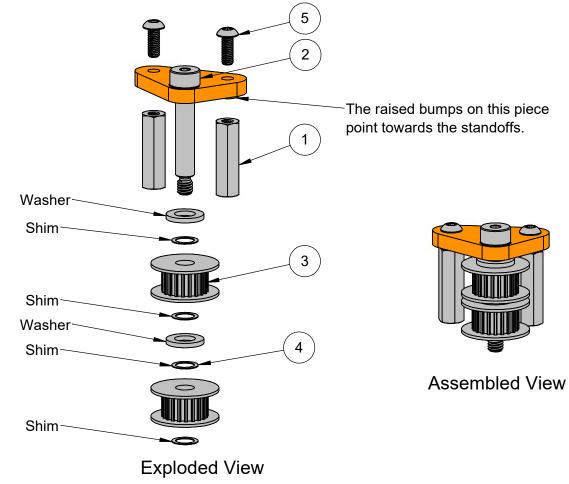

ITEM NO.	DESCRIPTION	
1	M3 Standoff, 20mm long, 6mm wide	2
2	M4 Shoulder Screw, 25mm long	1
3	20T Idler pulley, 2GT, 5mm bore	2
4	M5 Shim, 0.2mm thick, 7mm OD	4
5	M3 Buttonhead Screw, 8mm long	2
6	M5 Washer, 0.8-1.2mm thick	2
7	Left Corner Pulley Reinforcement Plate	1

Right Corner Generic Pulley Assembly

		Created by:	last edited:
CC	BY	Joshua Vasquez	3/14/2021
		SCALE: 1:1	SHEET 5 OF 7

7

•

Δ

В

В


NOTE: This assemby step is for Gates brand pulleys only. If you are using generic brand pulleys, skip this page and see the previous page.

Top View

В


This side is short. ackslash This side is long.

Note the plate orientation! Also note that this orientation is different from the prior pulley assembly.

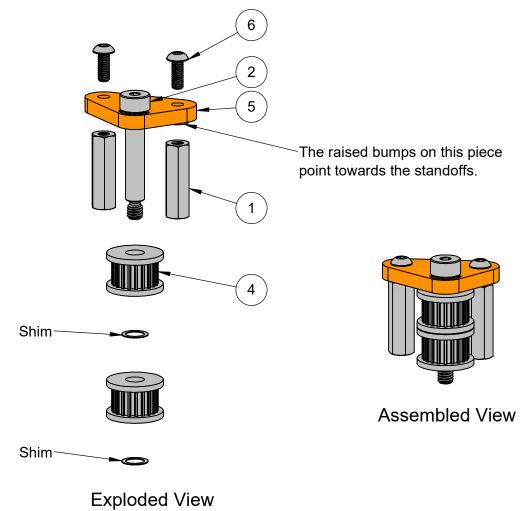


ITEM NO.	DESCRIPTION	QTY.
1	M3 Standoff, 20mm long, 6mm wide	2
2	M4 Shoulder Screw, 25mm long	1
3	M5 Shim, 0.2mm thick, 7mm OD	2
4	20T Idler pulley, 2GT, 5mm bore	2
5	Left Corner Pulley Reinforcement Plate	1
6	M3 Buttonhead Screw, 8mm long	2

Right Corner Gates Pulley Assembly		
© BY	Created by: Joshua Vasquez	last edited: 3/14/2021
	SCALE: 1:1	SHEET 6 OF 7

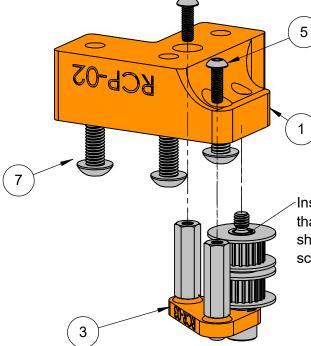

Exploded View

Install this assembly upside-down such that the shim seats properly on the shoulder screw as the entire assemlby is screwed in.

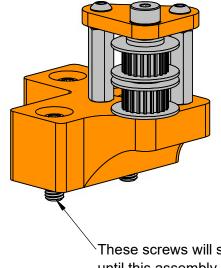

These screws will stay loose until this assembly is installed ont he frame.

В

Assembled View

ITEM NO.	DESCRIPTION	
1	Right Corner Plate with Insert Installed	1
3	Right Corner Pulley Assembly	1
5	M3 Buttonhead Screw, 10mm long	2
7	M5 Buttonhead Screw, 20mm long	3

Right Corner Pulley Plate Assembly			
	(†) BY	Created by:	last edited:
(33)		Joshua Vasquez	3/14/2021
		SCALE: 1:1	SHEET 7 OF 7